ECOSHOT USER INSTRUCTIONS v1.0




Prepare


Bottle

Push bottle up onto the nozzle to activate dispensing



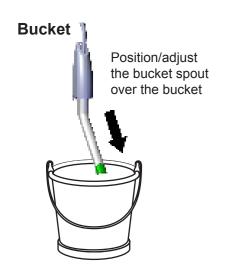

Operate

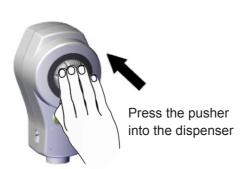





15 sec

delay



WARNING: Observe the

manufacturer regarding dilutions

and safety advice. Follow instructions carefully to avoid accidents.

guidelines from the chemical

Health & Safety

Wear protective clothing, gloves and goggles

when installing dispensers or handling chemicals.

Prime



Insert the quick-prime key, on the right hand side of the slot



Hold the quick-prime key firmly in place and slide it fully to the left. The pusher will release to the max 30ml dose position, to enable the unit to be primed



Continue to hold the quick-prime key in place. Repeatedly press the pusher to prime the unit



Once the unit is fully primed, remove the quick-prime key and press the pusher until you hear a click. The unit is now ready to operate normally at its original dose position


-CLICK -

Refill/change consumables





Lift the chemical outlet and insert the tubing inside the jerry can

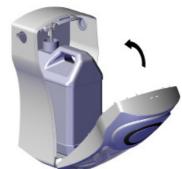

For health & safety purposes, close the cabinet lid once the jerry can is in place

Pouch



Lift the pouch lever and insert the chemical pouch



Once the chemical pouch is in position, push down pouch lever to secure the chemical flow